


NATURAL 1




Narzędzia potrzebne do montażu

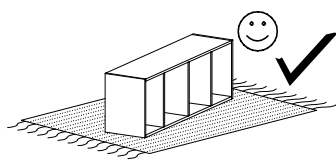

UWAGA !!!


MONTOWANIE USZKODZONYCH
ELEMENTÓW POWODUJE UTRATĘ
GWARANCJI

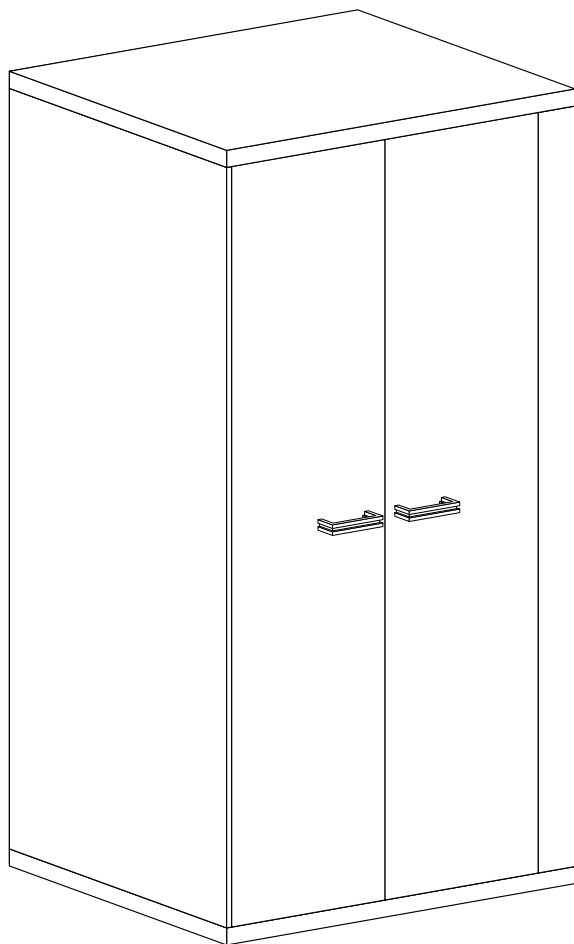


Nr	D[mm]	S[mm]	G[mm]	Ilość
1	1900	576	16	1
2	1900	560	16	1
3	1018	577	48	1
4	1018	577	48	1
5	983	560	16	1
6	983	120	16	1
7	1900	100	16	1
8	1950	1100	2,5	1
9	1894	445	16	2

UWAGA !!!

Mebel zawiera
elementy drewniane




Y2 - 2 St.
3,5x16 mm

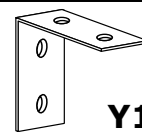


Y1 - 1 St.

W przypadku reklamacji proszę podać numer pakowacza znajdujący się na kartonie.

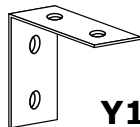

Y1 - 1 St.



Y2 - 2 St.
3,5x16 mm



X1 - 21 St.




X2 - 4 St.
ø8 mm




X3 - 4 St.
ø5 mm




A - 2 St.




B - 1 St.




C - 4 St.
4x22 mm




D - 28 St.
3,5x16 mm




E - 18 St.



F - 21 St.

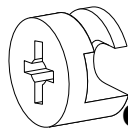


G - 21 St.




H - 2 St.




I - 80 St.




J - 4 St.




L - 8 St.

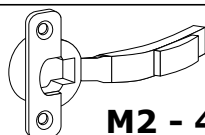


M2 - 4 St.

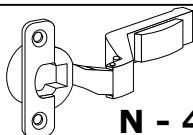




N - 4 St.

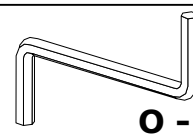

O - 1 St.




P - 8 St.
3,5x25 mm

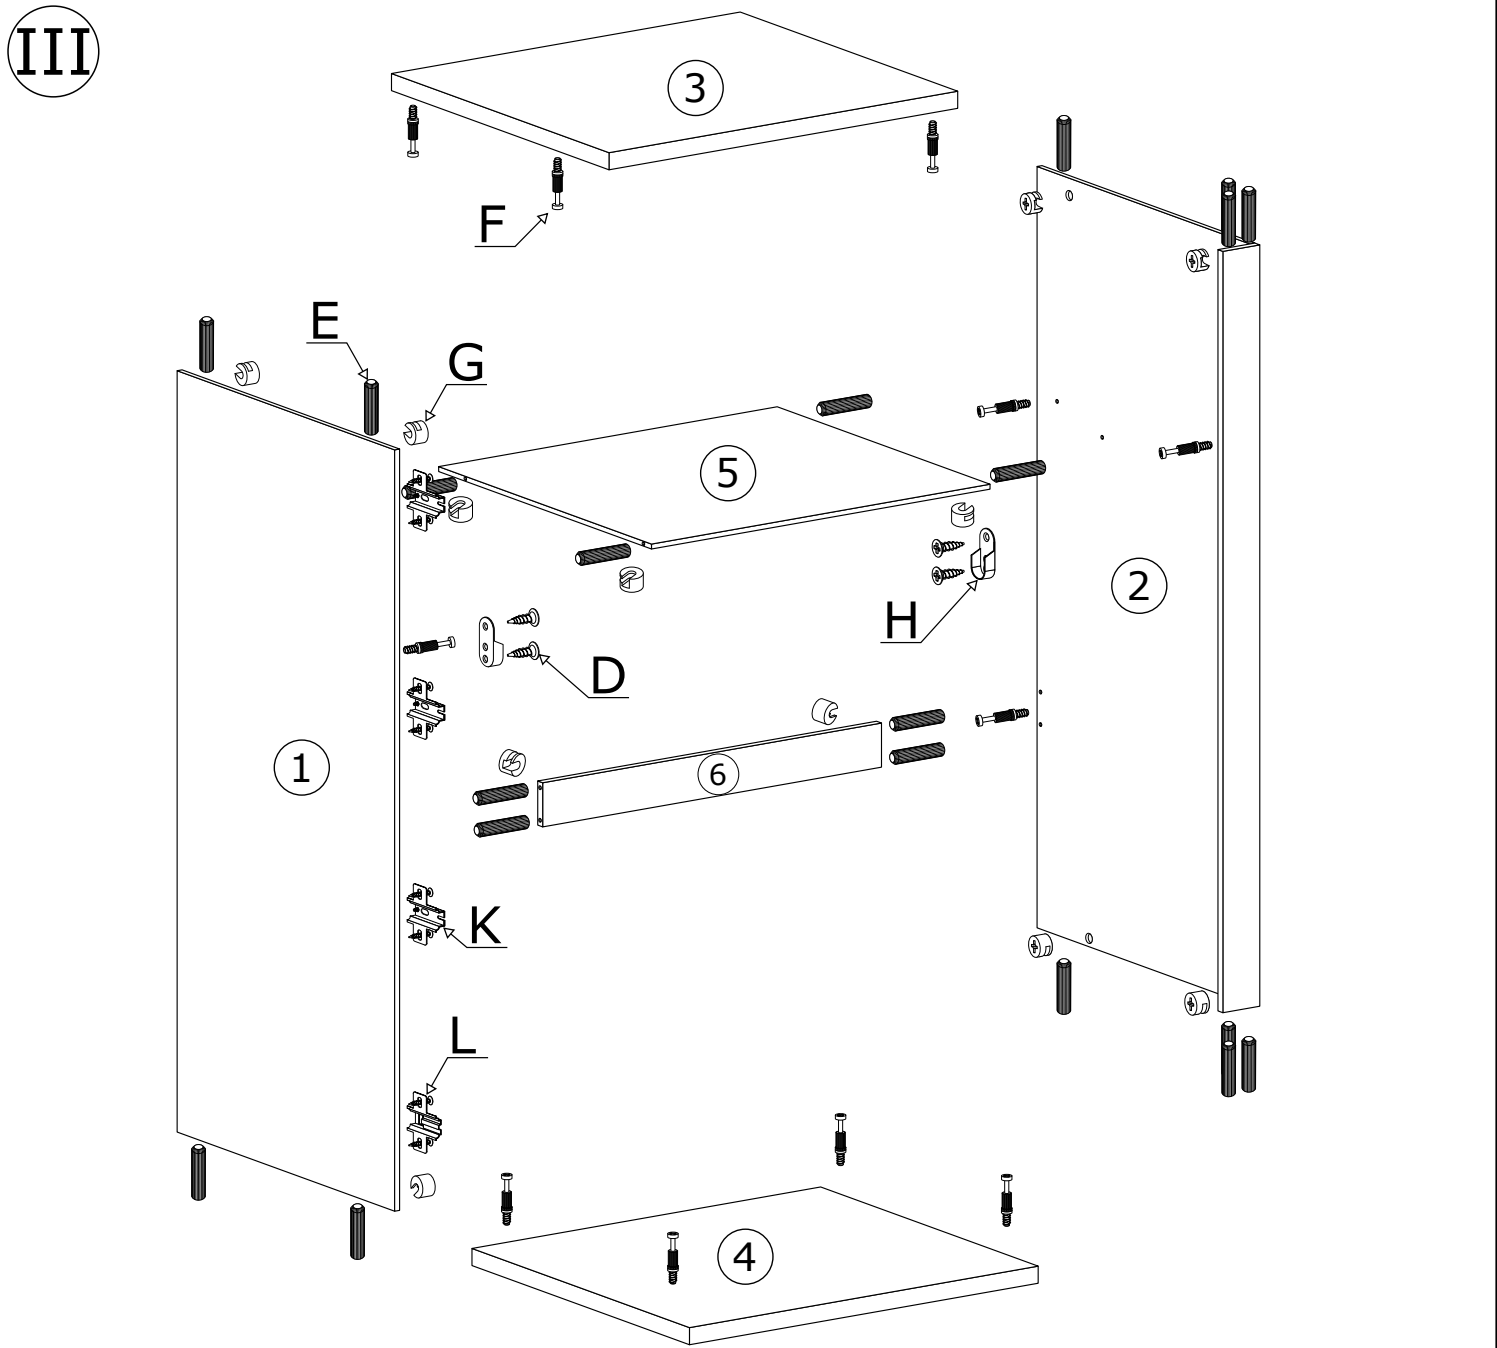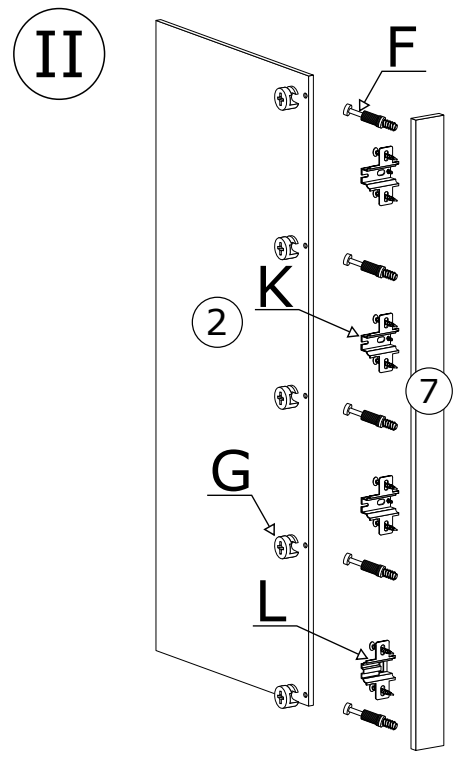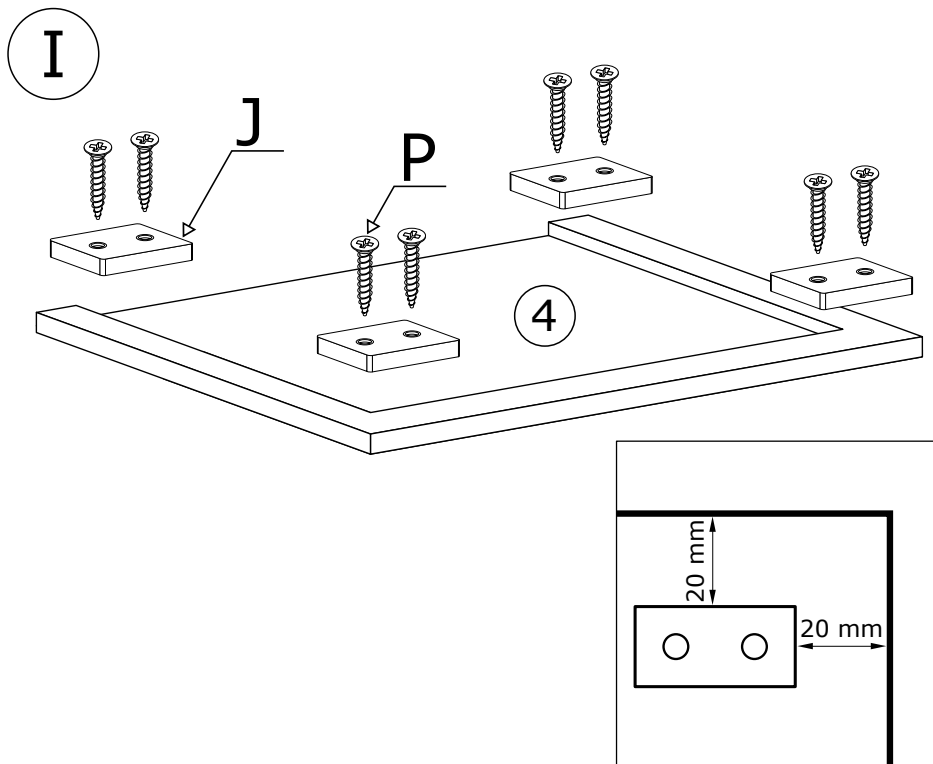


IV



x80

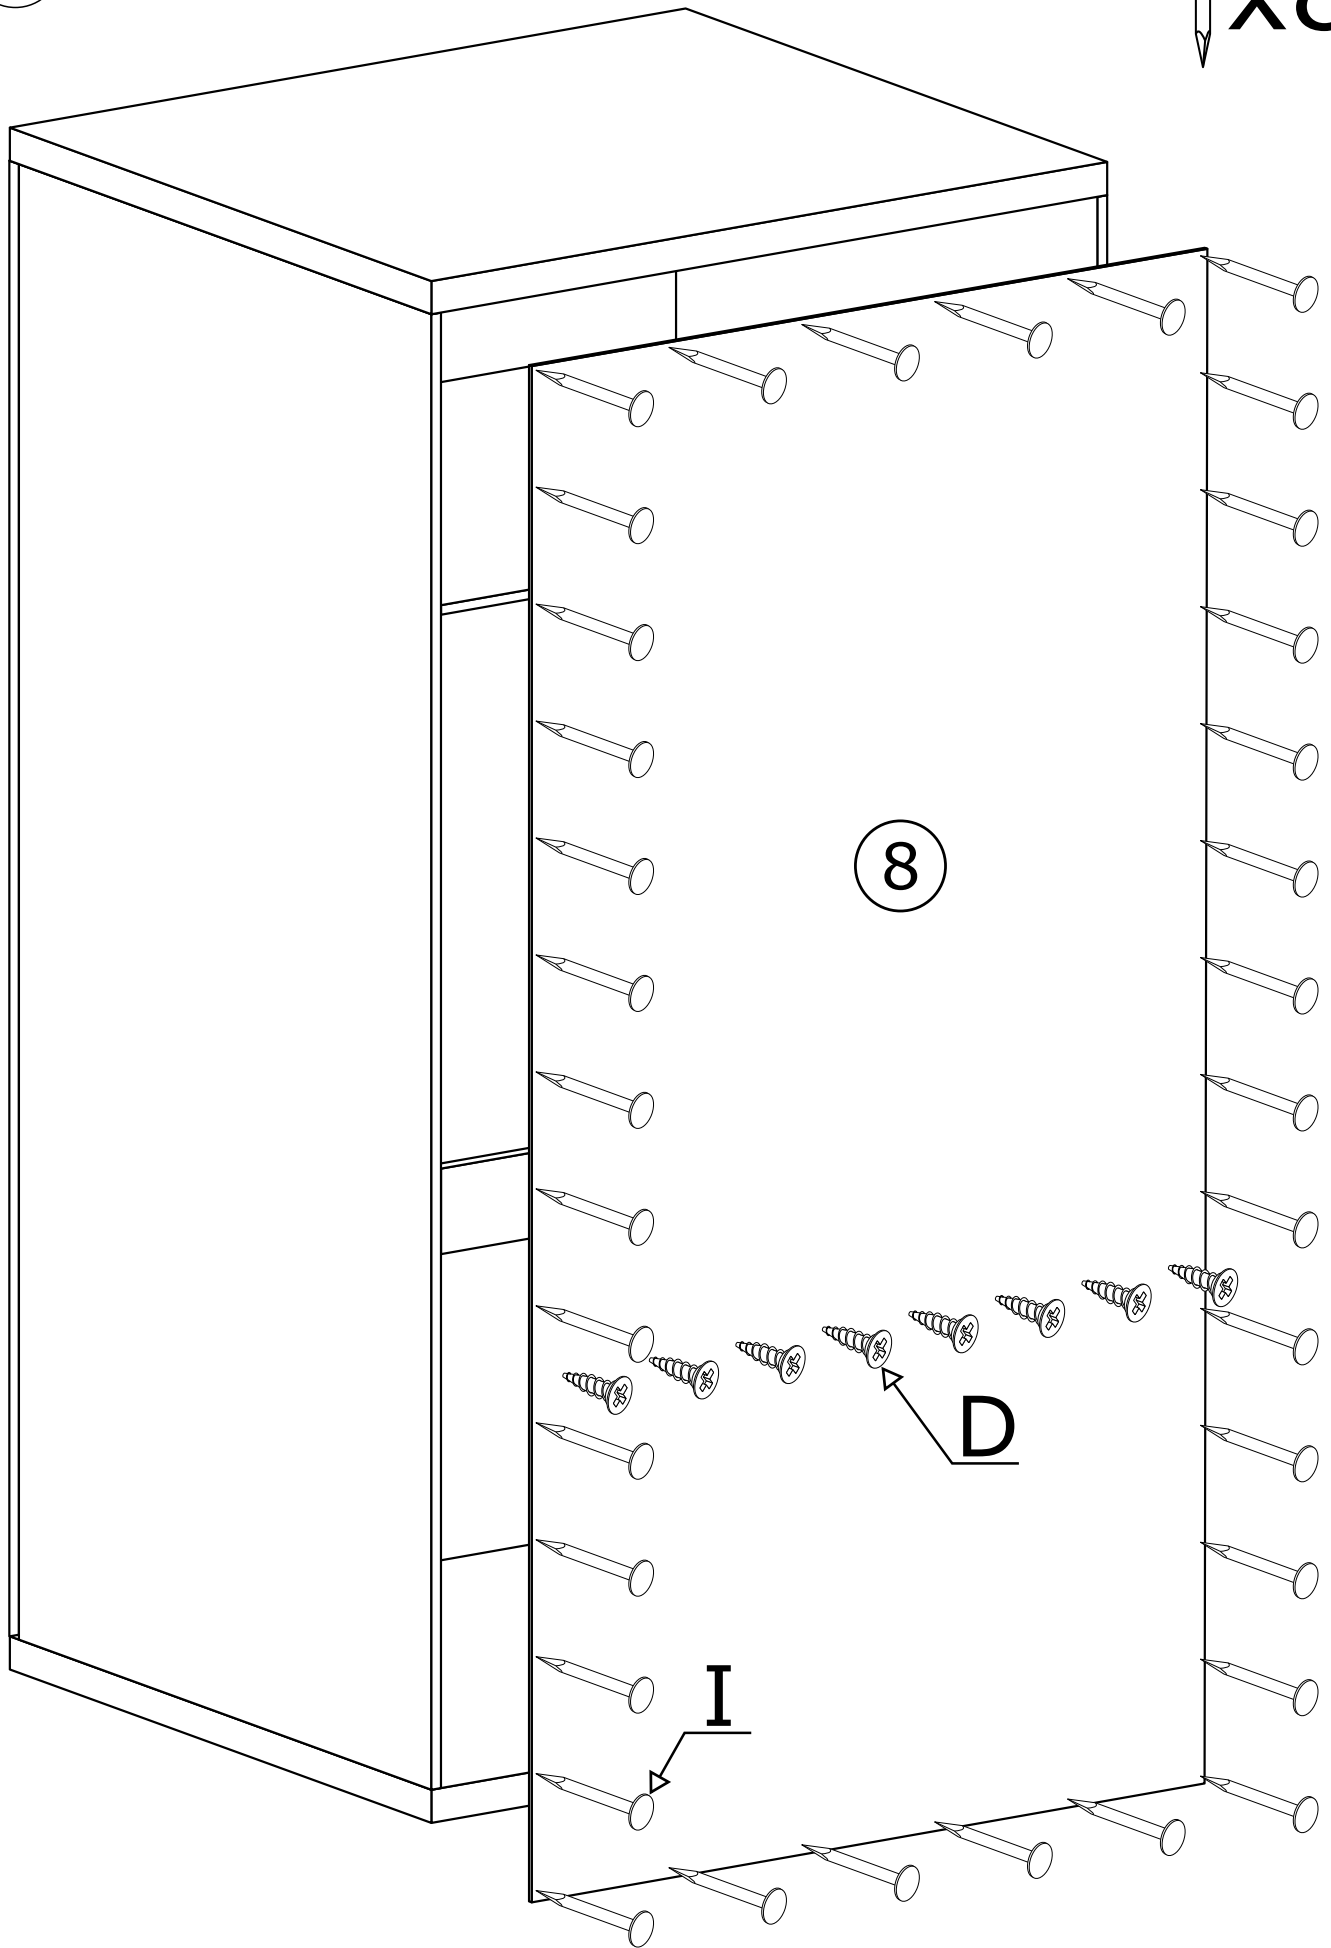

V

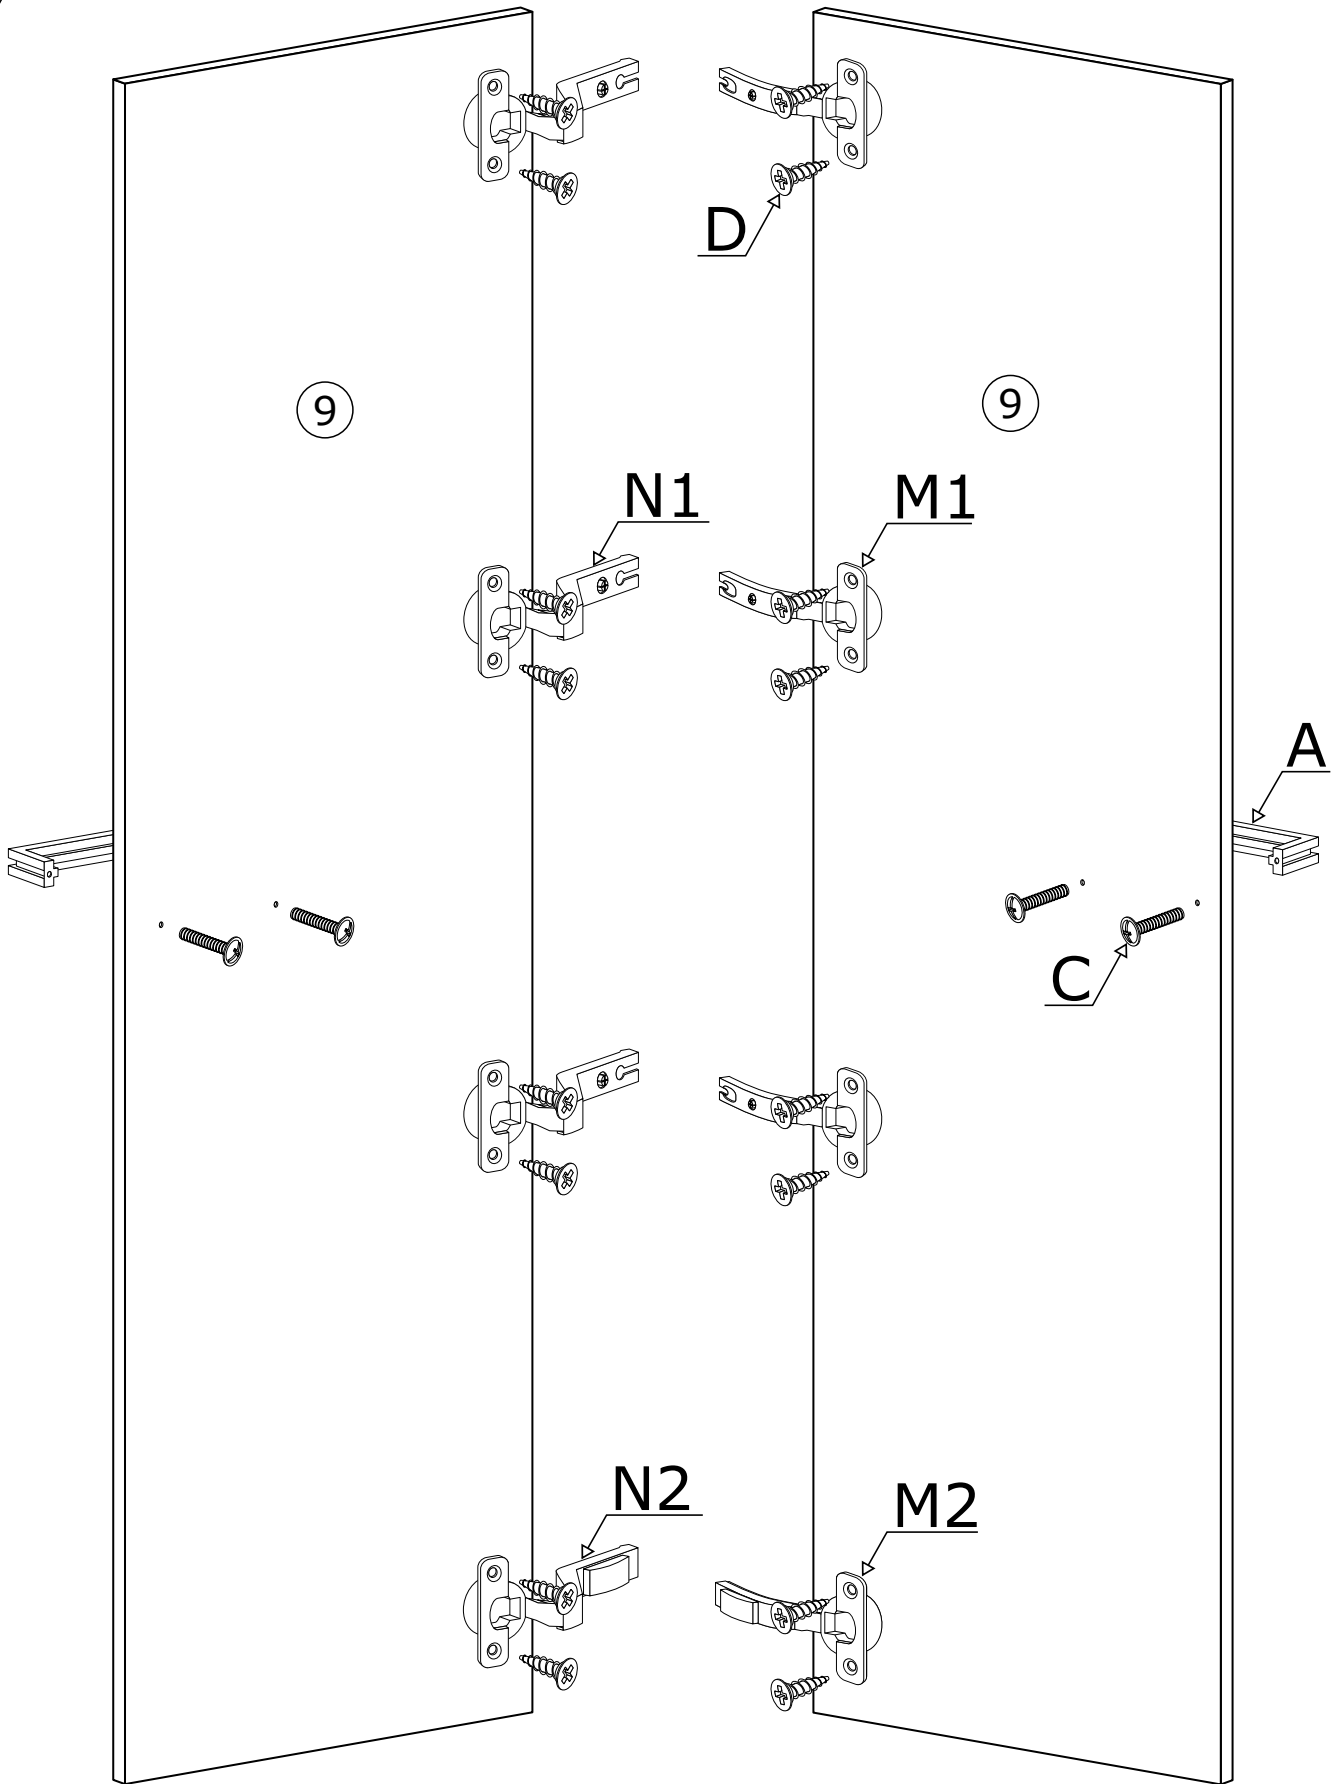

VI

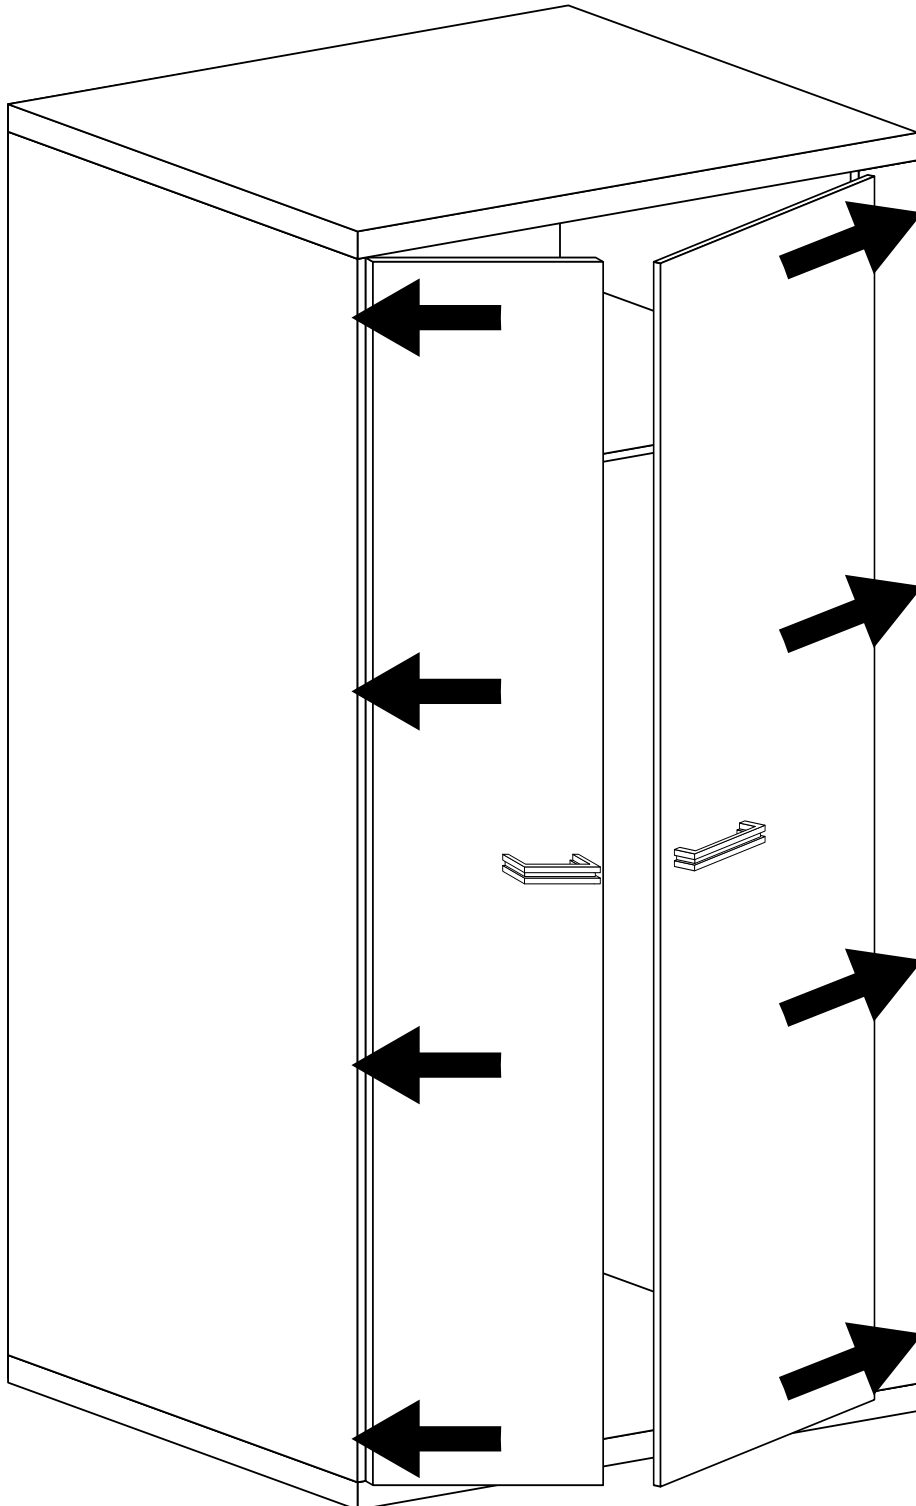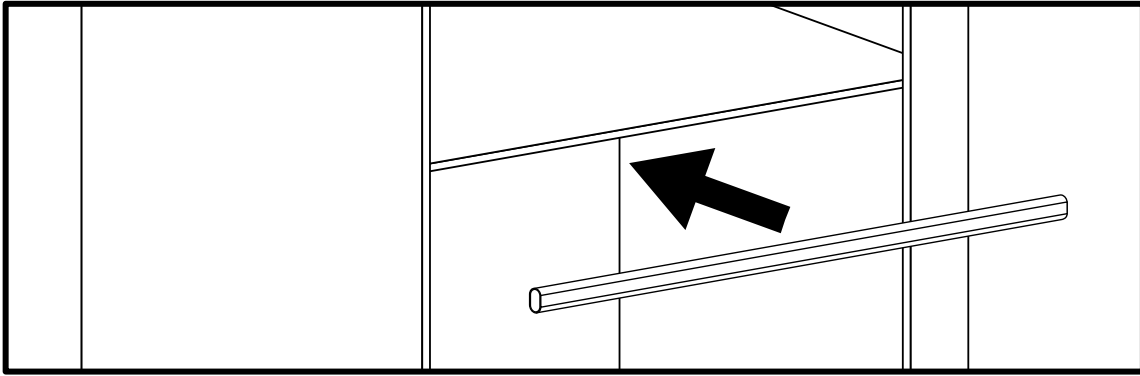

MONTAŻ KĄTOWNIKA

